


AU 6AWM 9150

PROGRAMME CHART





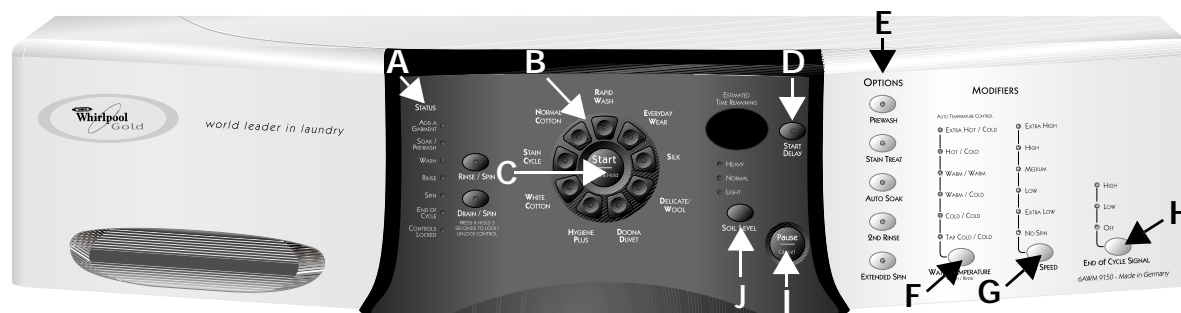

 
 

 
 
 

 
 
 
 
 
 
 
 





- A. Programme Sequence Indicator
 B. Wash Cycles
 C. "Start" Button
 D. "Start Delay" button
 E. Options
 F. "Water Temperature" Modifier
 G. "Spin Speed" Modifier
 H. "End of Cycle Signal" Modifier
 I. "Pause/Cancel" Button
 J. "Soil Level" Modifier



When you select an option an indicator lights up.
 If an option is not recommended for the selected programme the indicator light will not light and a warning sound advises that this option is not possible.
 If an option is selected after the programme has started a sound will indicate that it is not possible to select it at this stage.

*: optional / yes: dosing required.

Programme	Care labels	Type of wash/Notes	Max. Load	Detergents and additives				Special Options						Spin Speed	Temperature °C
			Softener	Bleach	Main Wash	Prewash	Start Delay	Pre-wash	Stain Treat	Auto Soak	2nd Rinse	Extended Spin			
			kg												max
Hygiene Plus		For heavily soiled colourfast cotton which needs sanitization.	10.0	*	*	Yes	*	*	*	*	*	*	*	extra high	extra hot/cold
White Cotton	  	For white cotton loads which you would like to bleach. An additional rinse provides optimal rinse performance to avoid chlorine residues on your laundry.	10.0	*	*	Yes	*	*	*	*	*	*	*	extra high	hot/cold
Stain Cycle	  	For normally soiled, sturdy and colourfast cotton. Use Stain Treat option for optimal removal of organic stains like blood, egg yolk etc.	10.0	*	*	Yes	*	*	*	*	*	*	*	extra high	hot/cold
Normal Cotton	   	For cotton loads such as shirts, permanent press blends and linen items.	10.0	*	*	Yes	*	*	*	*	*	*	*	high	hot/cold
Rapid Wash	   	For slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.0	*	*	Yes	—	*	—	—	*	*	*	extra high	hot/cold
Everyday Wear	 	For no-iron fabrics such as sport shirts, permanent press blends, cotton and linens.	5.0	*	*	Yes	*	*	*	—	*	*	—	low	warm/warm
Silk		For washable silk. Check care label instructions to make sure that garment is identified as machine washable.	2.0	*	—	Yes	—	*	—	—	—	*	—	no spin	warm/warm
Delicate/Wool		For curtains, delicate dresses, skirts, shirts and blouses. For washable wool. Check care label instructions to make sure that garment is identified as machine washable.	2.5	*	—	Yes	—	*	—	—	—	*	—	low	warm/warm
Doona / Duvet		For handwashable and special-care garments.	2.0	*	—	Yes	—	*	—	—	—	*	—	extra low	warm/warm
Rinse / Spin	—	For a rinse and an extra high speed spin. If you wish you can reduce the speed.	10.0	*	—	—	—	*	—	—	—	*	*	extra high	warm/warm
Drain / Spin	—	For draining the washer with an additional extra high speed spin. If you wish you can reduce the speed.	10.0	—	—	—	—	*	—	—	—	—	*	extra high	—

Whirlpool is a registered trademark of Whirlpool USA

5019 301 15131



CONSUMPTION DATA

Programme	Temperature	Load (kg)	Water (l)	Approximate programme duration* (hours : minutes)
Hygiene Plus	extra hot/cold	10.0	100	1:50
White Cotton	hot/cold	10.0	100	1:20
Stain Cycle	hot/cold	10.0	100	2:10
Normal Cotton **	warm/cold	10.0	100	2:10
Rapid Wash	warm/cold	2.0	48	0:35
Everyday Wear	warm/cold	5.0	75	0:55
Silk	cold/cold	2.0	75	0:30
Delicate/Wool	cold/cold	2.5	75	0:35
Doona / Duvet	cold/cold	2.0	75	0:35

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table dependent on the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time. The Hygiene Plus cycle complies to the UK Care Standard Act 2000 (CSA) Standard 26, therefore rest time indication might vary if hot water supply is below 60°C.

** When tested to 5/N25 2040 2:2000.

ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" of the instructions for use.

1. Press the desired wash cycle.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp of the wash cycle button lights up.
3. The programme sequence, the predefined spin speed, water temperature, End of Cycle signal and options indicators corresponding to the selected programme light up.
The recommendations can be altered by pressing the modifier and the options buttons.

SELECT ANY DESIRED OPTION AND MODIFIER

Selecting any option the indication lights up. When the combination of programme, additional options and modifiers is not possible, the indication lights switch off automatically and a signal sounds.

"Prewash"

- For heavily soiled laundry.
- The cycle time increases approx. 15 minutes.
- Add detergent to the Prewash and Main Wash dispenser compartments.
- When using the Prewash compartment, do not use liquid detergent in the Main Wash compartment: use powder detergent for the main wash cycle.

- "Prewash" and "Auto Soak" options cannot be selected in the same cycle.
- ### "Stain Treat"
- For heavily soiled laundry.
 - Warm water fill for optimal organic soil removal and heat to high temperature.

"Auto Soak"

- For heavily soiled laundry with set-in stains.
- The cycle time increases approx. 30 minutes.
- Use with a wash cycle:
Select the desired wash cycle and "Auto Soak" option, add detergent to the Prewash and the Main Wash dispenser compartments; press the "Start" button. When using the Prewash compartment, do not use liquid detergent in the Main Wash compartment: use powder detergent for the main wash cycle.
- Use without a wash cycle:
Select first "Drain/Spin" or "Rinse/Spin" and then "Auto Soak" option; choose the desired soak temperature, add detergent to the Prewash compartment and press the "Start" button.
- "Prewash" and "Auto Soak" options cannot be selected in the same cycle.

"2nd Rinse"

- This option is recommended to ensure the removal of detergent or bleach residues from garments.
- It provides an additional rinse with the same water temperature as the first rinse.
- This option is particularly suitable for areas with very soft water, for baby clothes and to help people with allergies.

"Extended Spin"

- This option is useful for adding an additional spin to any cycle to improve the "fluff" of your laundry, to reduce drying time and to save energy

"Modifiers"

Preset cycle settings of water temperature (wash temperature/ rinse temperature), spin speed (no spin to extra high), End of Cycle signal (off, low or high) and soil level (light, normal, heavy) can be changed. You can modify the settings by pressing the respective buttons.

Changing the soil level leads to different programme durations.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity may be cheaper.

- Select programme, modifier and options.
- Press the "Start Delay" button to select the delay time by 1 to 10 hours;
- Press the **"Start"** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

To cancel the "Start Delay".

- Press the "Pause/Cancel" button once.
- Press the "Start Delay" button up to 00 h in the display.
- Check the programme setting and press and hold the **"Start"** button.

PROGRAMME START

Turn on the taps and press the **"Start"** button. The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from top to bottom through "Add a Garment", "Soak/Prewash", "Wash", "Rinse", "Spin" and "End of Cycle". When a sequence of the programme is finished the corresponding lamp goes out.

ADD A GARMENT

After programme start and while the "Add a garment" lamp is on you can still add a garment. Press "Pause/Cancel" button once. After few seconds the door will be unlocked and you can add the item. Close the door and press the "Start" button again. The programme will run again from the point where it was interrupted.

DOOR LOCK

After each programme start the door is locked and approx. 0.5 l of water is rinsed in. The door is unlocked for a few seconds. The door is then locked until the end of the programme. Detailed information can be found in the instructions for use.

PROGRAMME END

- The time remaining is "0:00" and the "End of Cycle" – light is on.
1. Take out the load.
 2. Turn the tap off and leave the door ajar to allow the drum to dry out.
The control panel is switched off 5 minutes after the end of the cycle, it is still possible to open the door.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the "Pause/Cancel" button once to interrupt the programme. The light flashes.
2. Select the new programme with temperature, any options and modifier if you want.
3. Press the **"Start"** button. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A PROGRAMME BEFORE THE END

Press the "Pause/Cancel" button twice. Any existing water is drained out before the door can be opened.

LOCKING CONTROLS

The "Controls Locked" prevents unintended use of the washer. You can also use the "Controls Locked" feature to prevent unintended cycle or option changes during a cycle. When "Controls Locked" is lit, all buttons are disabled. You can lock the washer while it is operating.

To lock the controls:

Select and hold "Drain/Spin" button for 3 seconds. The "Controls Locked" status indicator lights up.

To unlock the controls:

Select and hold "Drain/Spin" button for 3 seconds until the "Controls Locked" status indicator is switched off.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 15131

HOT / COLD FILL INSTRUCTION

Connect hot and cold water supply (Fig. 1):

1. Fix the water inlet hose with the red stripe at the red valve of the washing machine and at the hot water tap.
2. Fix the water inlet hose with the blue stripe at the white valve of the washing machine and at the cold water tap.

To get the optimum performance you should use both the hot and cold water supplies. It is not recommended to convert to cold fill only.

Make sure:

- a) The connections are tight, but do not over tighten by using a tool.
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).
- c) And see instruction for use "Connect the water supply hose".

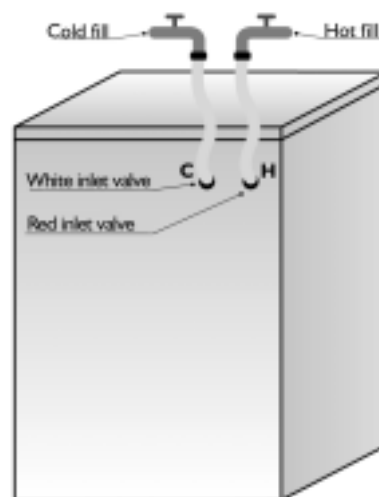


Fig. 1